


RTV servis Horvat

Tel: ++385-31-856-637

Tel/fax: ++385-31-856-139


Mob: 098-788-319

www.rtv-horvat-dj.hr

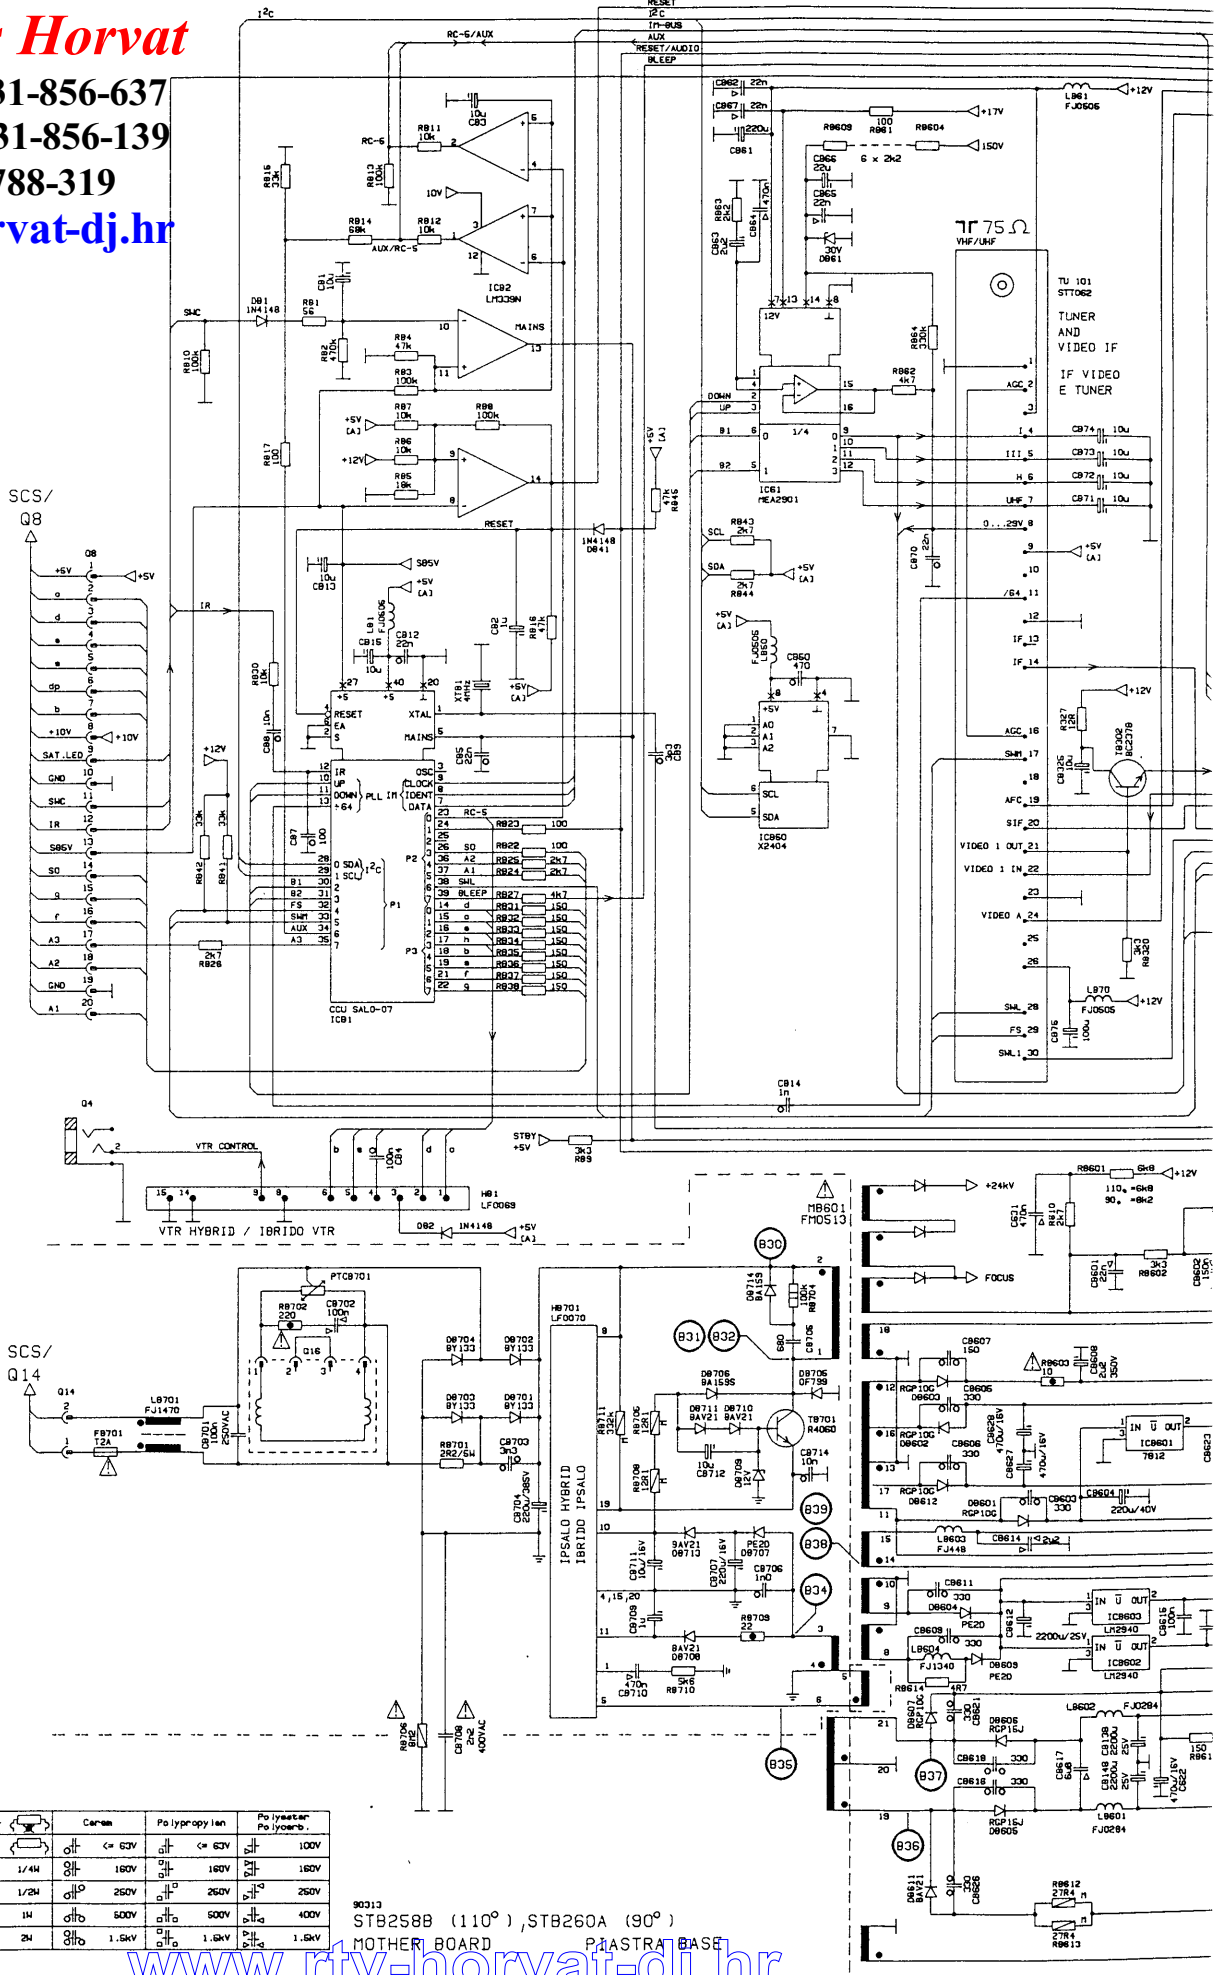



Символ	Символ	Символ	Символ	Символ	Символ
Символ	Символ	Символ	Символ	Символ	Символ
≤ 63V	≤ 63V	≤ 63V	≤ 63V	≤ 63V	≤ 63V
1/4W	180V	180V	180V	180V	180V
1/2W	250V	250V	250V	250V	250V
1W	500V	500V	500V	500V	500V
2W	1.5kV	1.5kV	1.5kV	1.5kV	1.5kV

90313 STB258B (110°), STB260A (90°)
MOTHER BOARD PIASTRA BASE


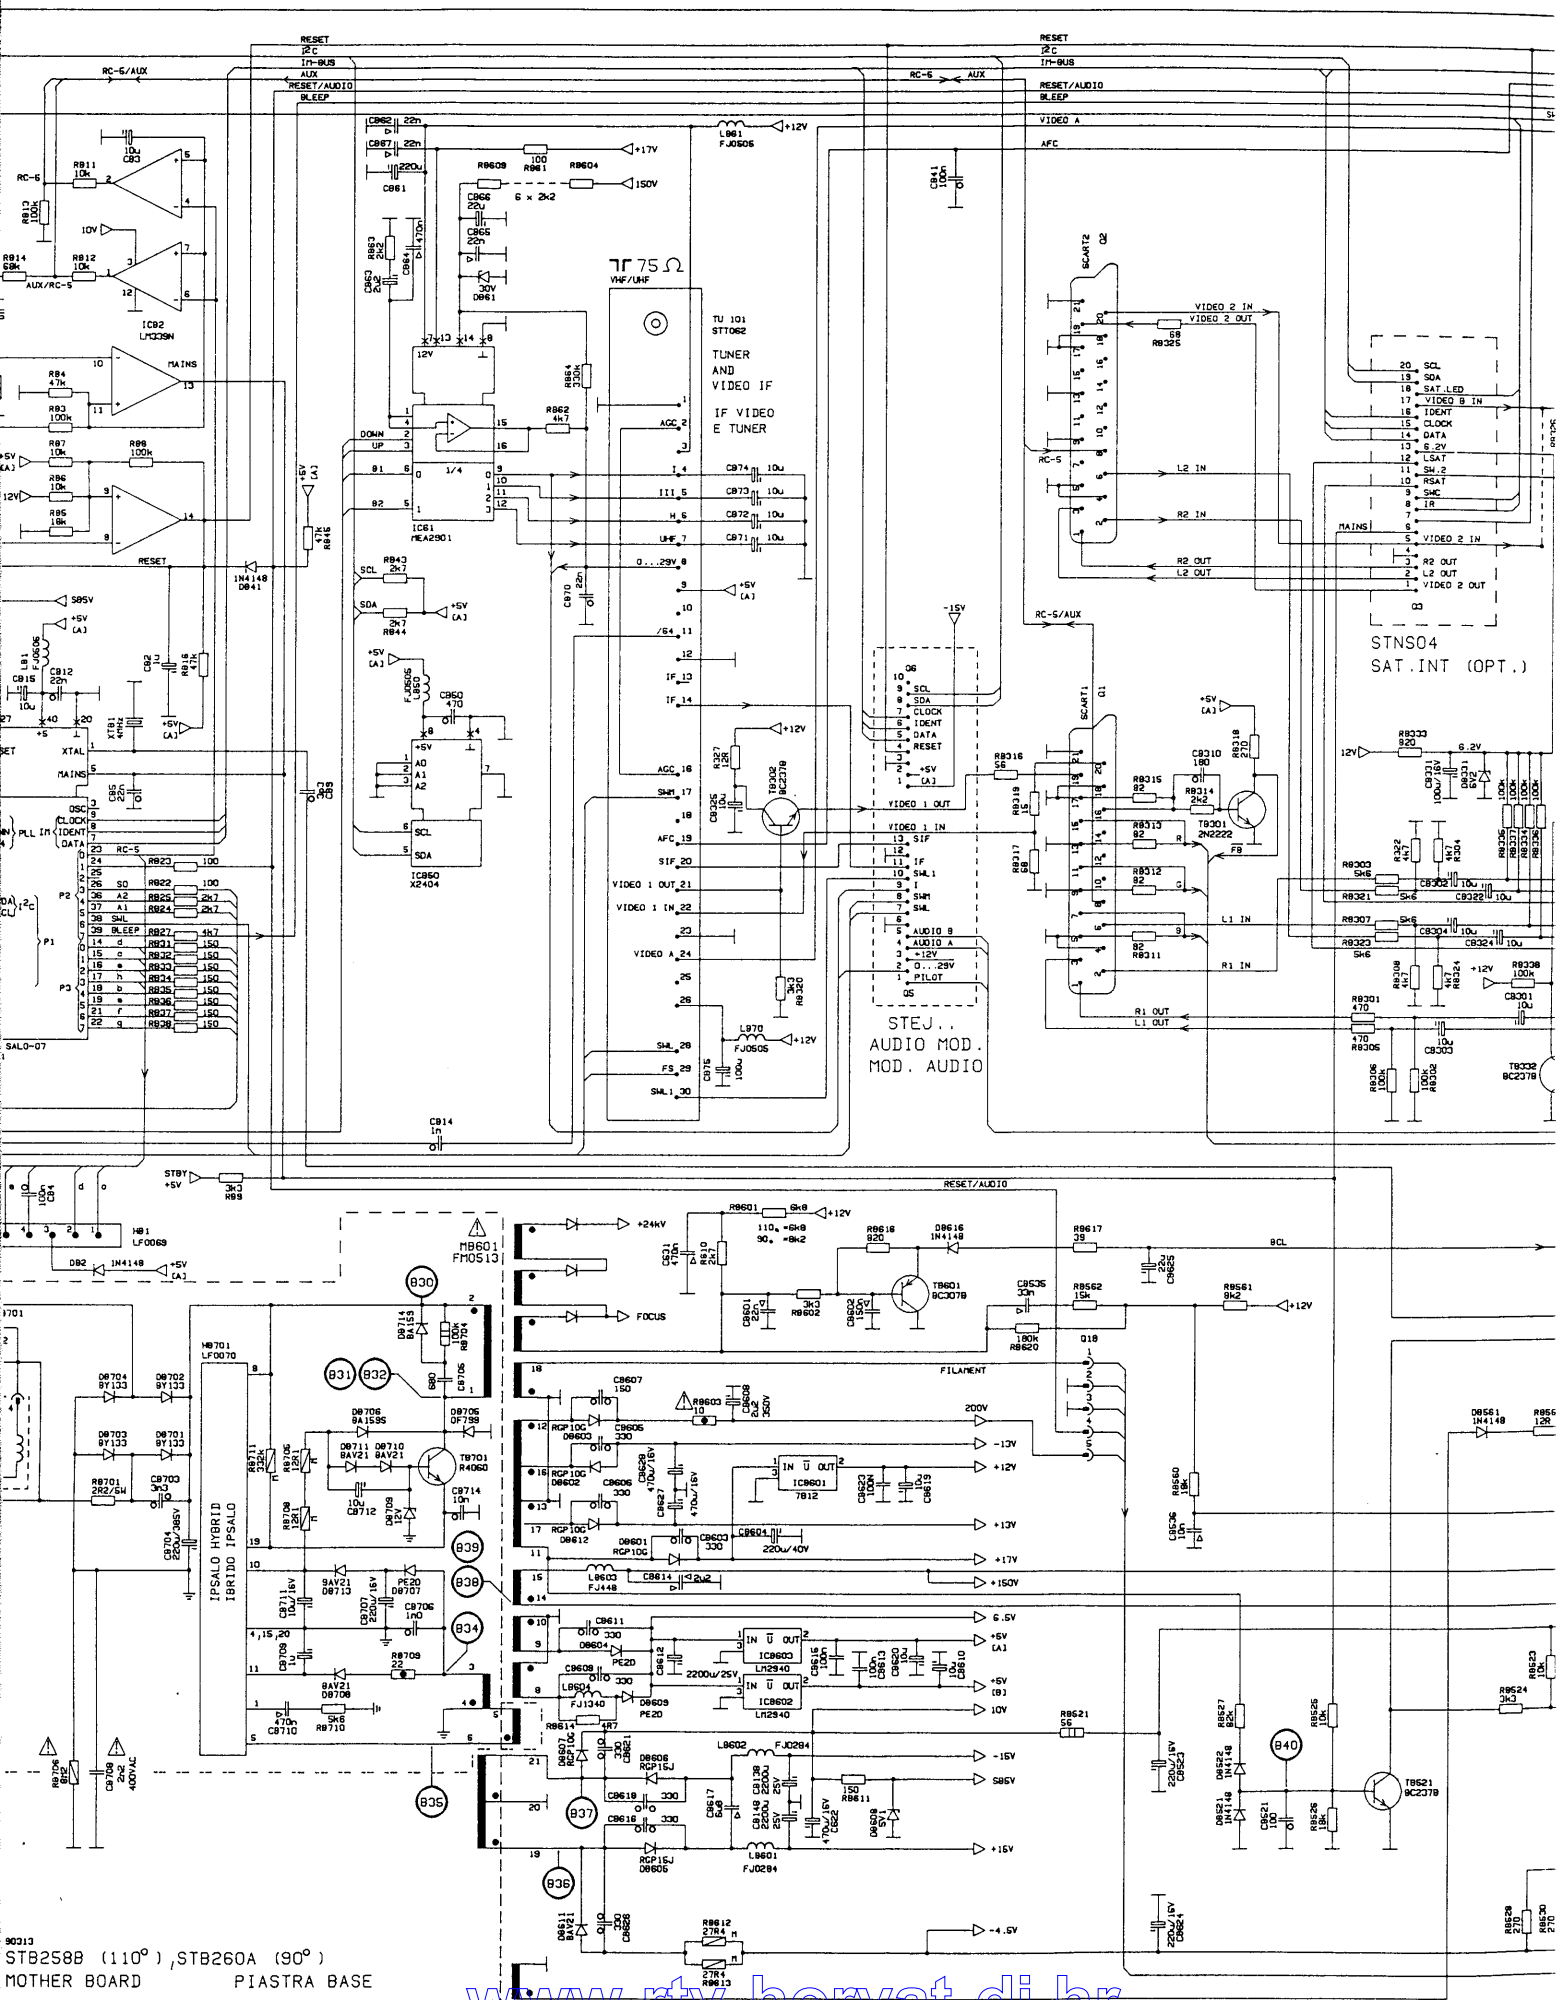



STB258B (110°), STB260A (90°)
 MOTHER BOARD PIASTRA BASE

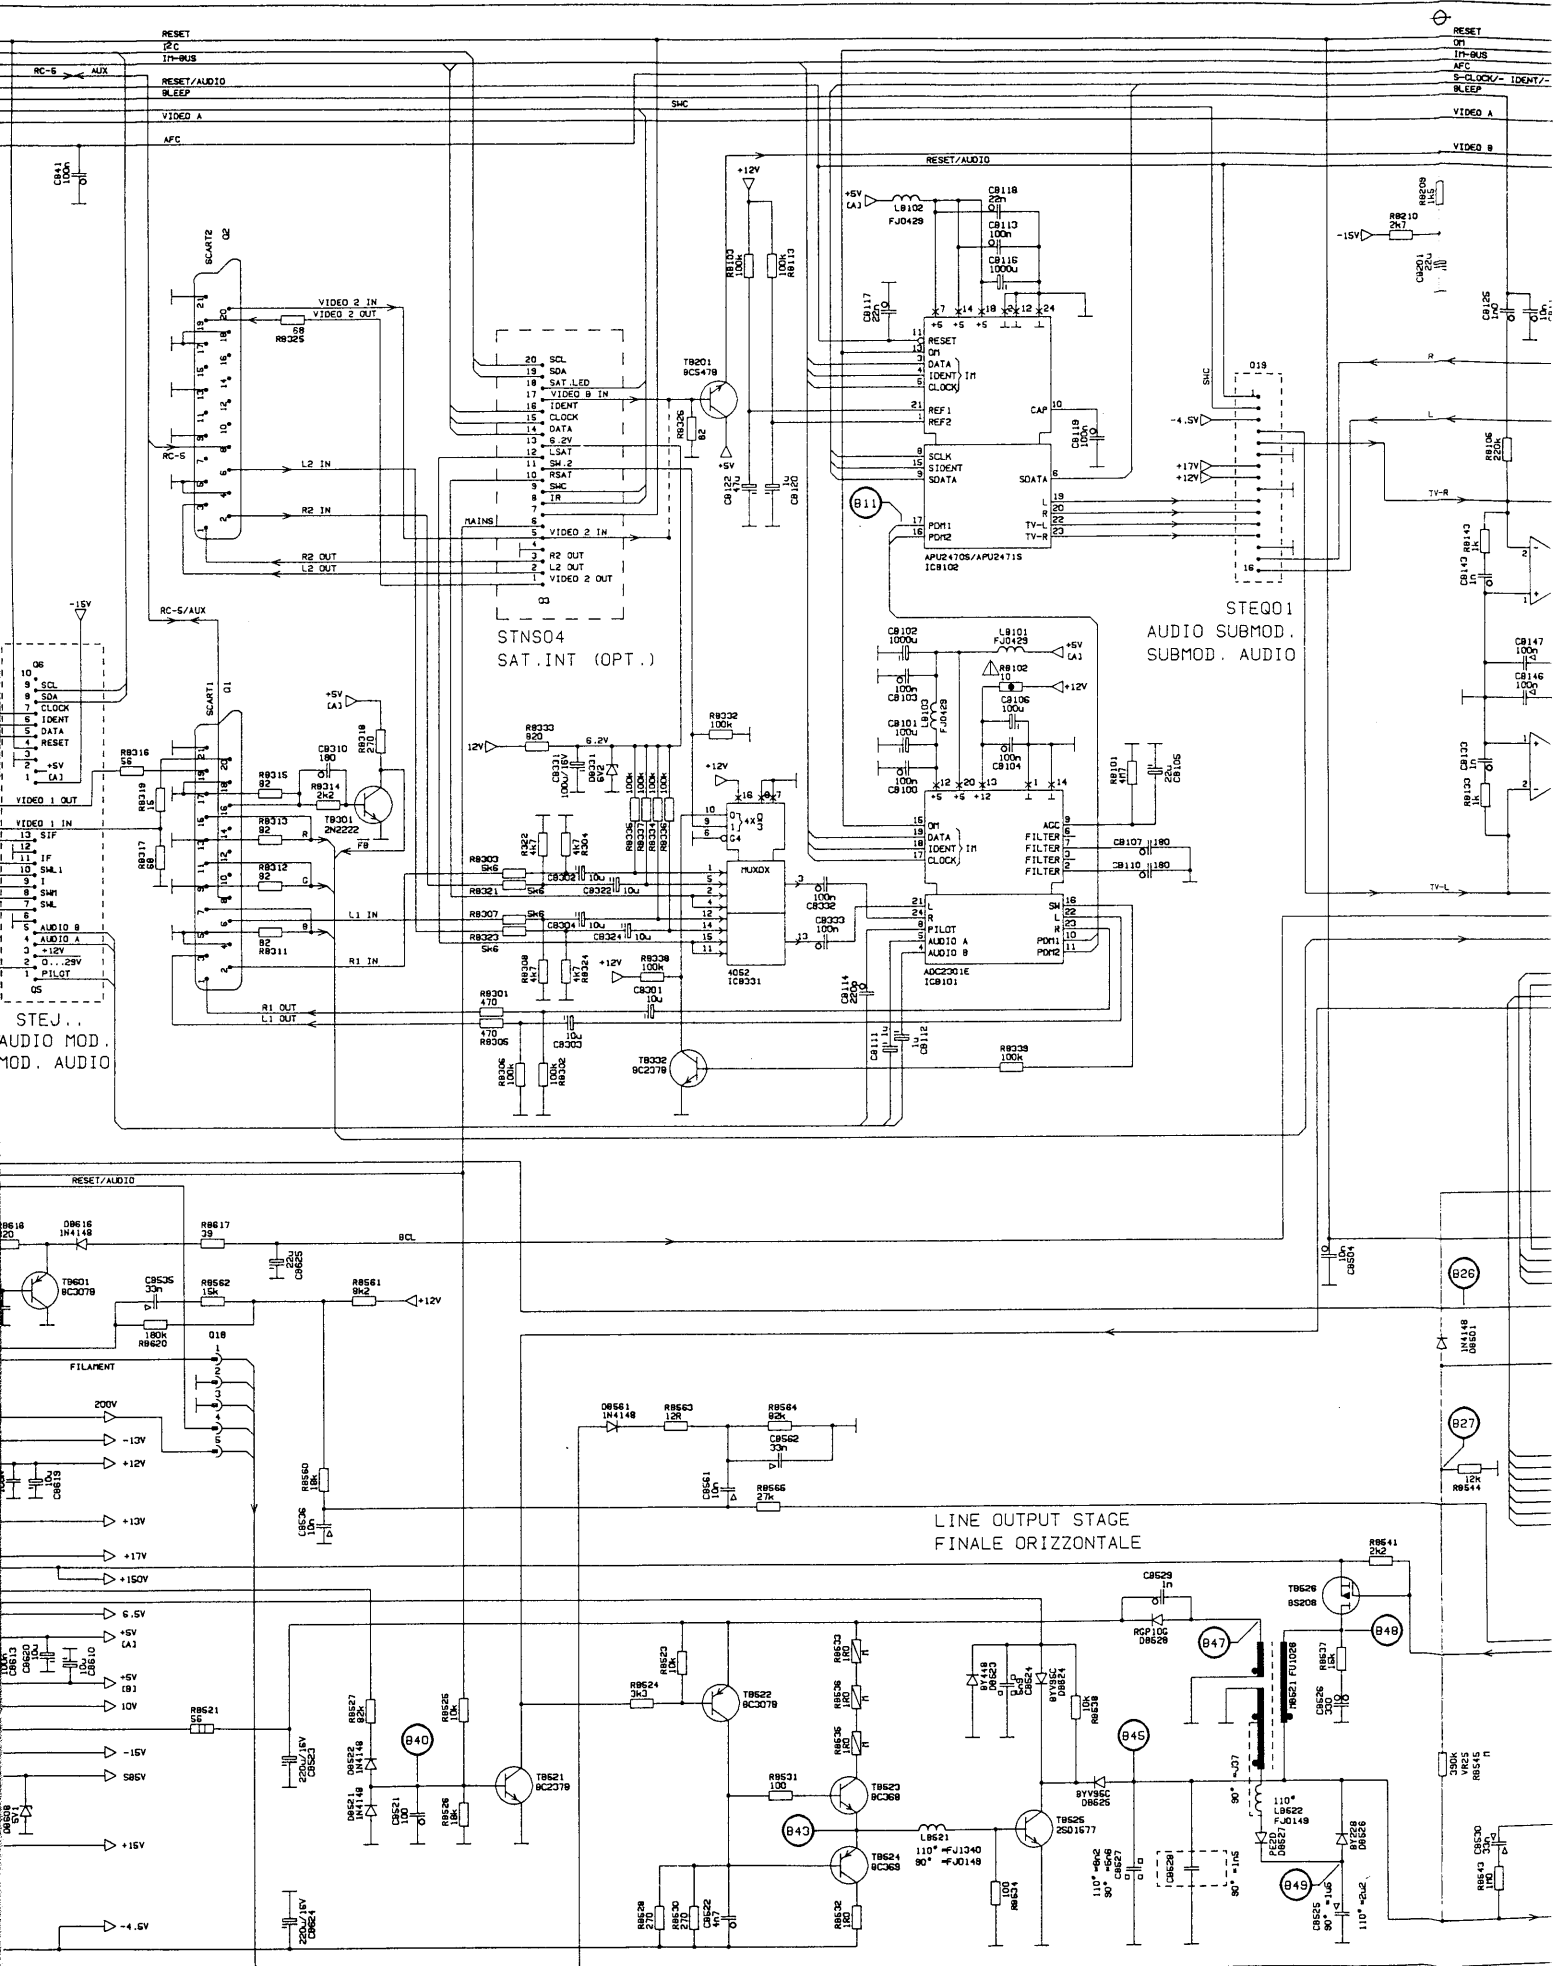

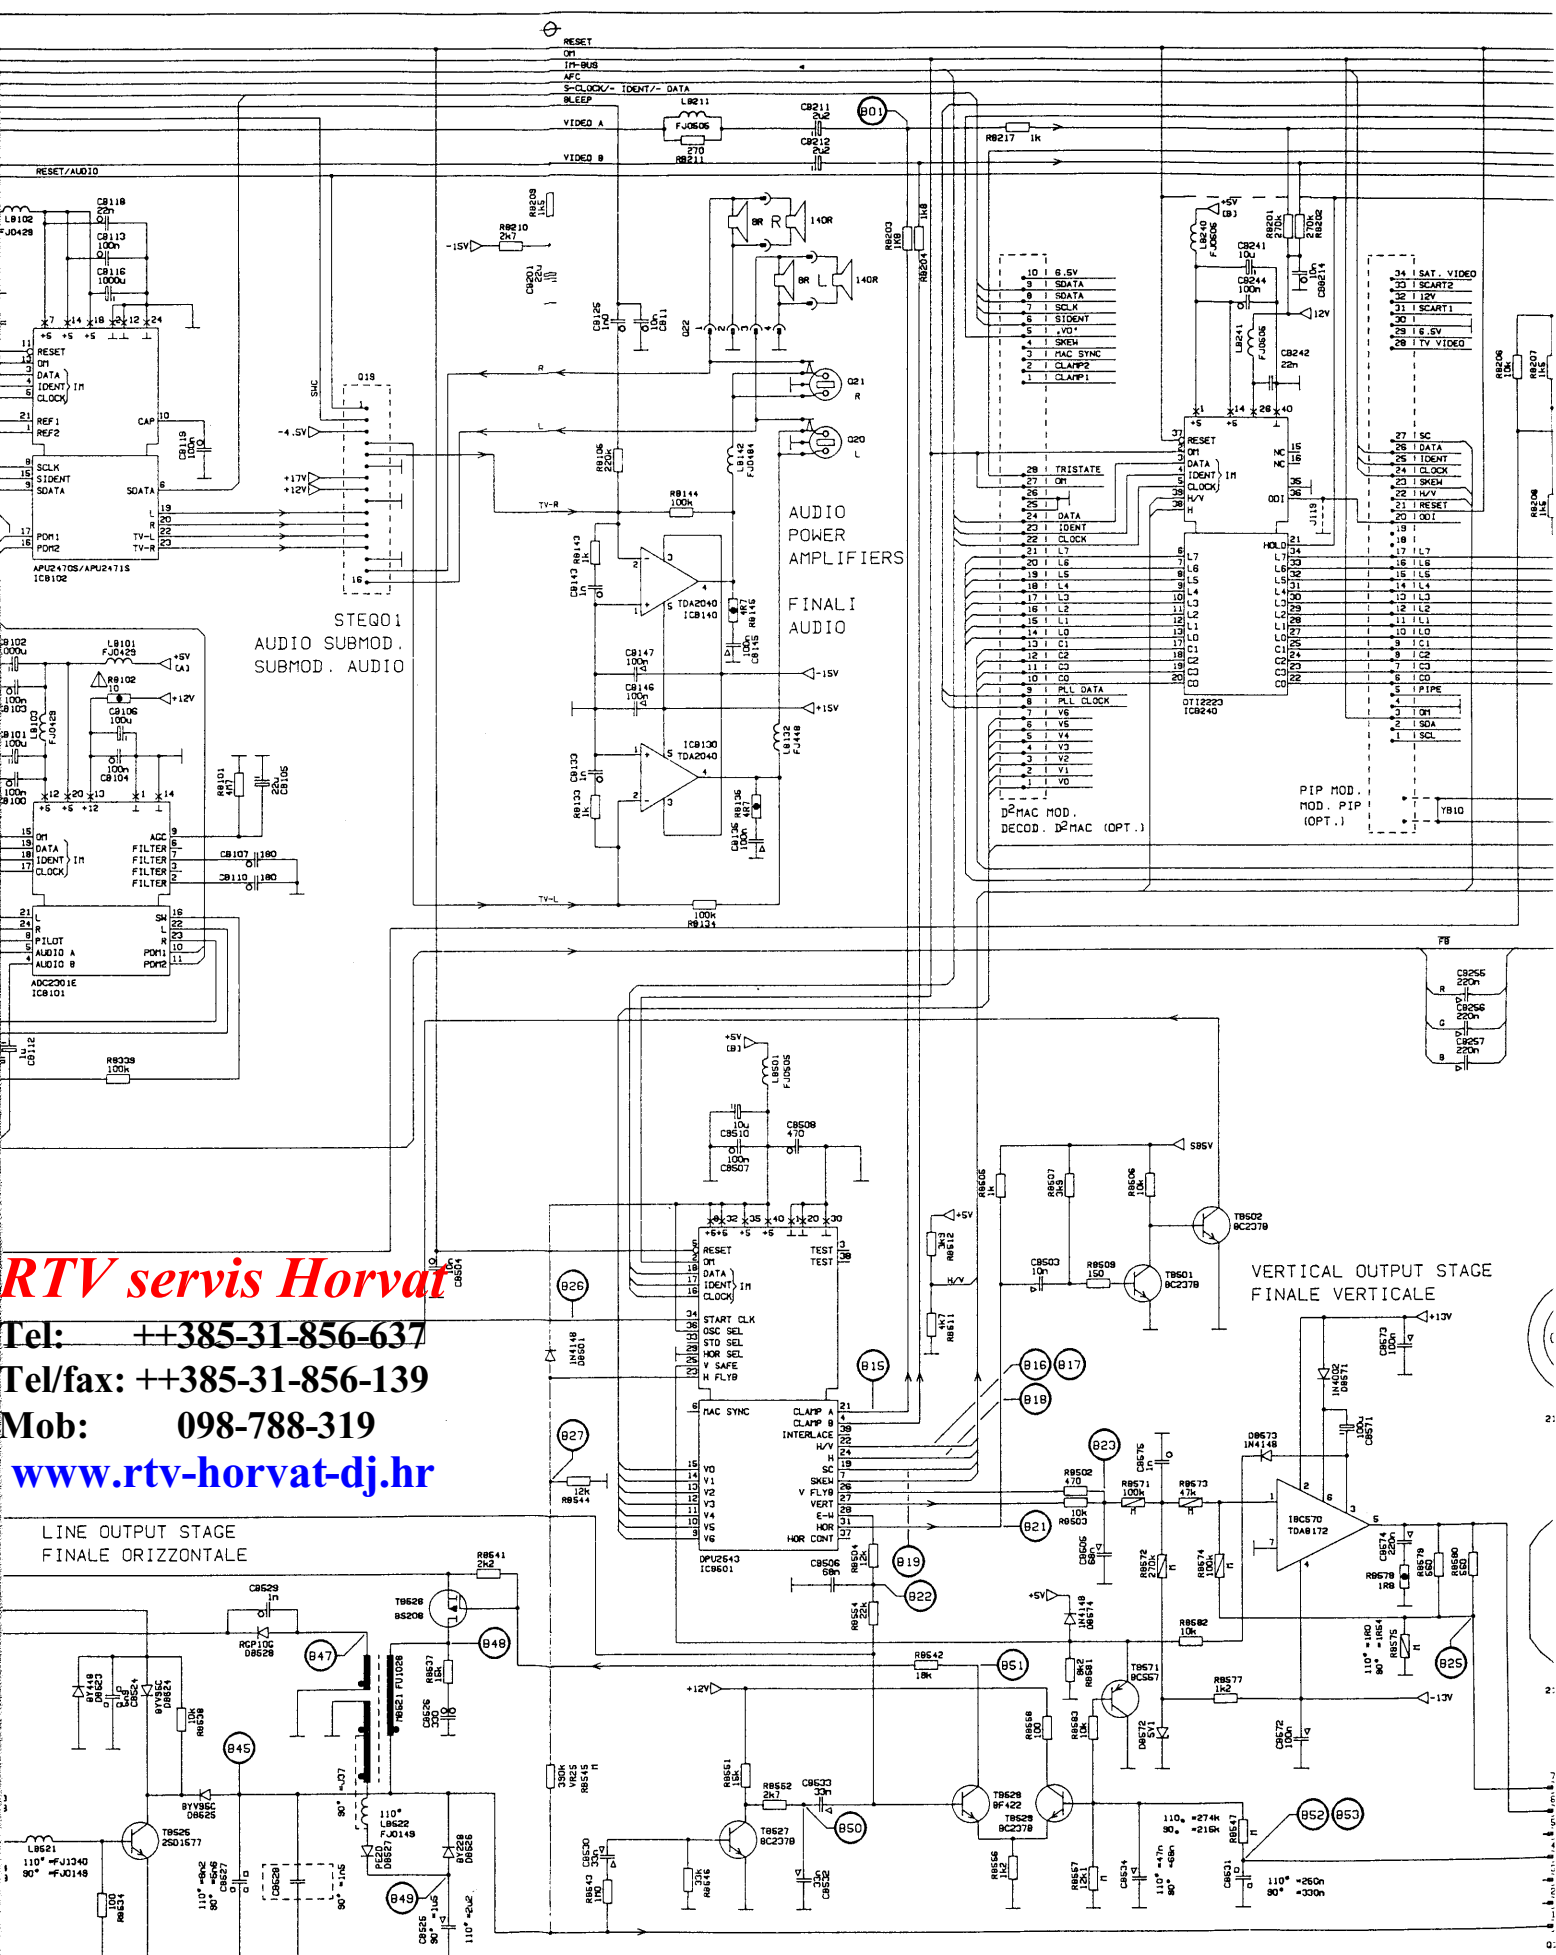




RTV servis Horvat
 Tel: ++385-31-856-637
 Tel/fax: ++385-31-856-139
 Mob: 098-788-319
 www.rtv-horvat-dj.hr

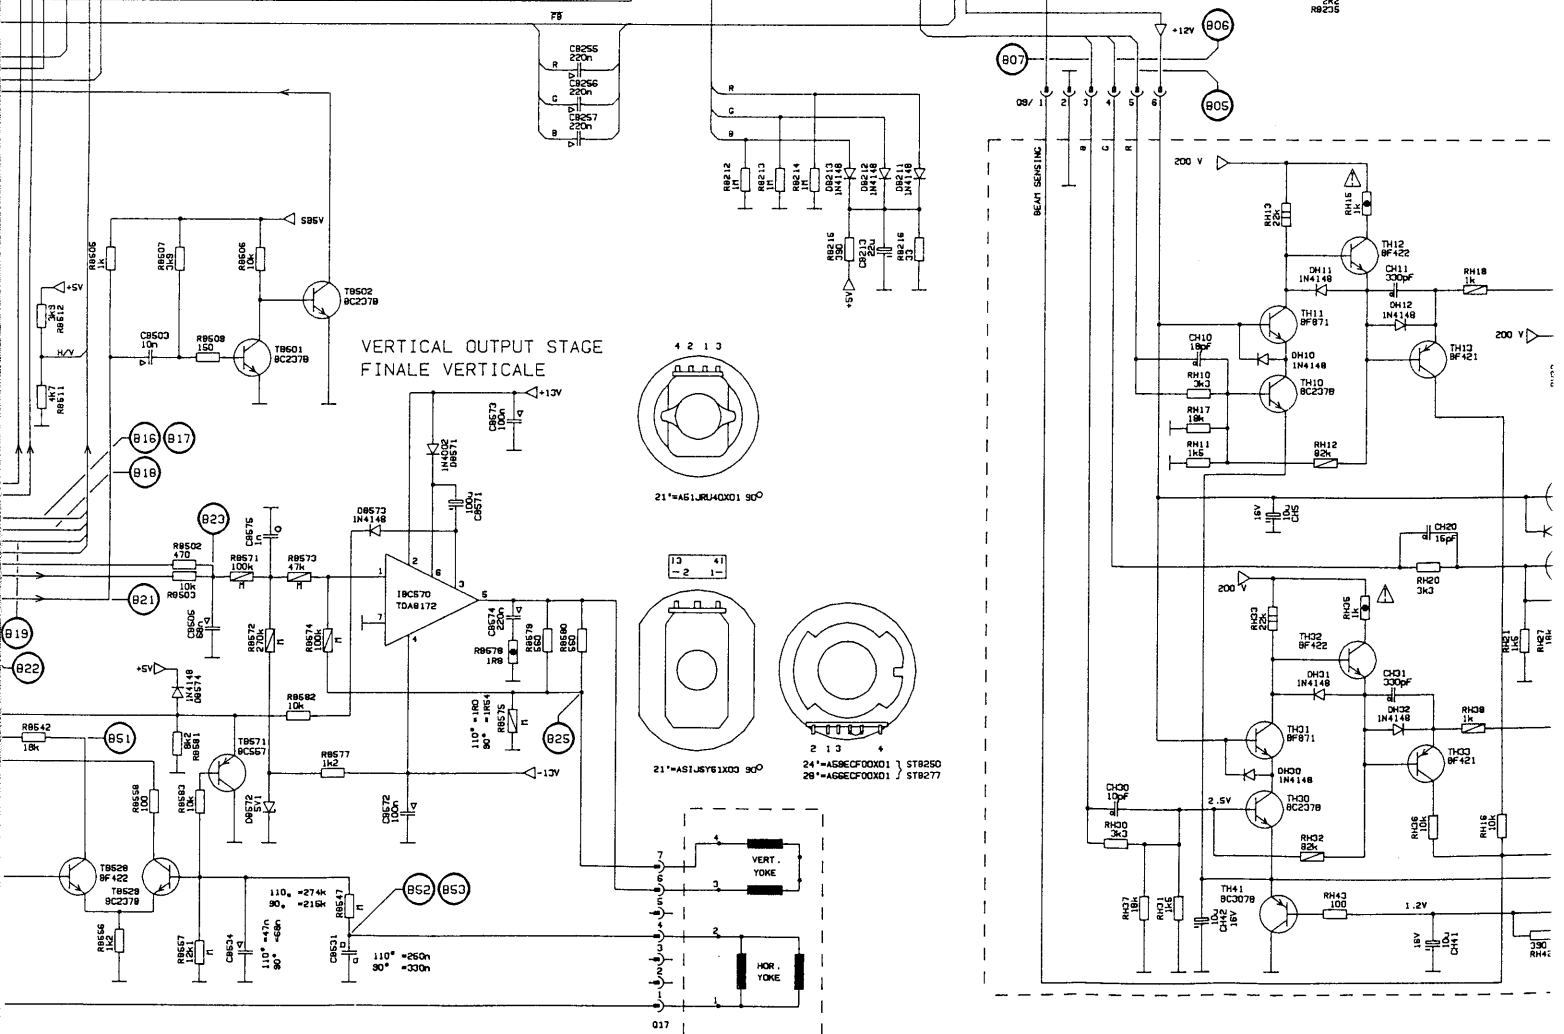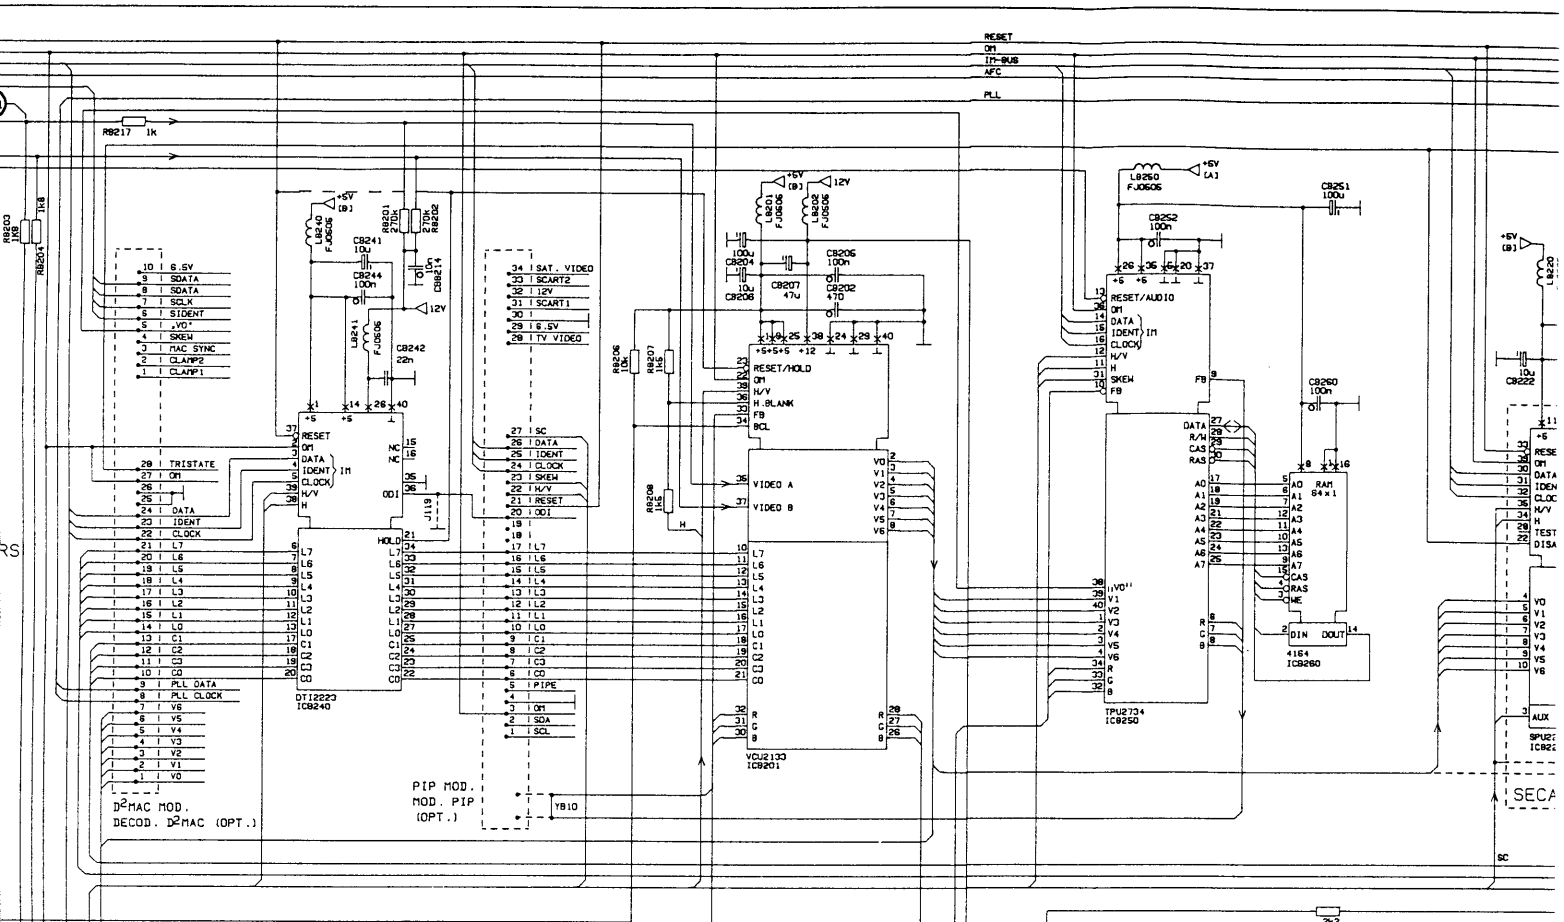

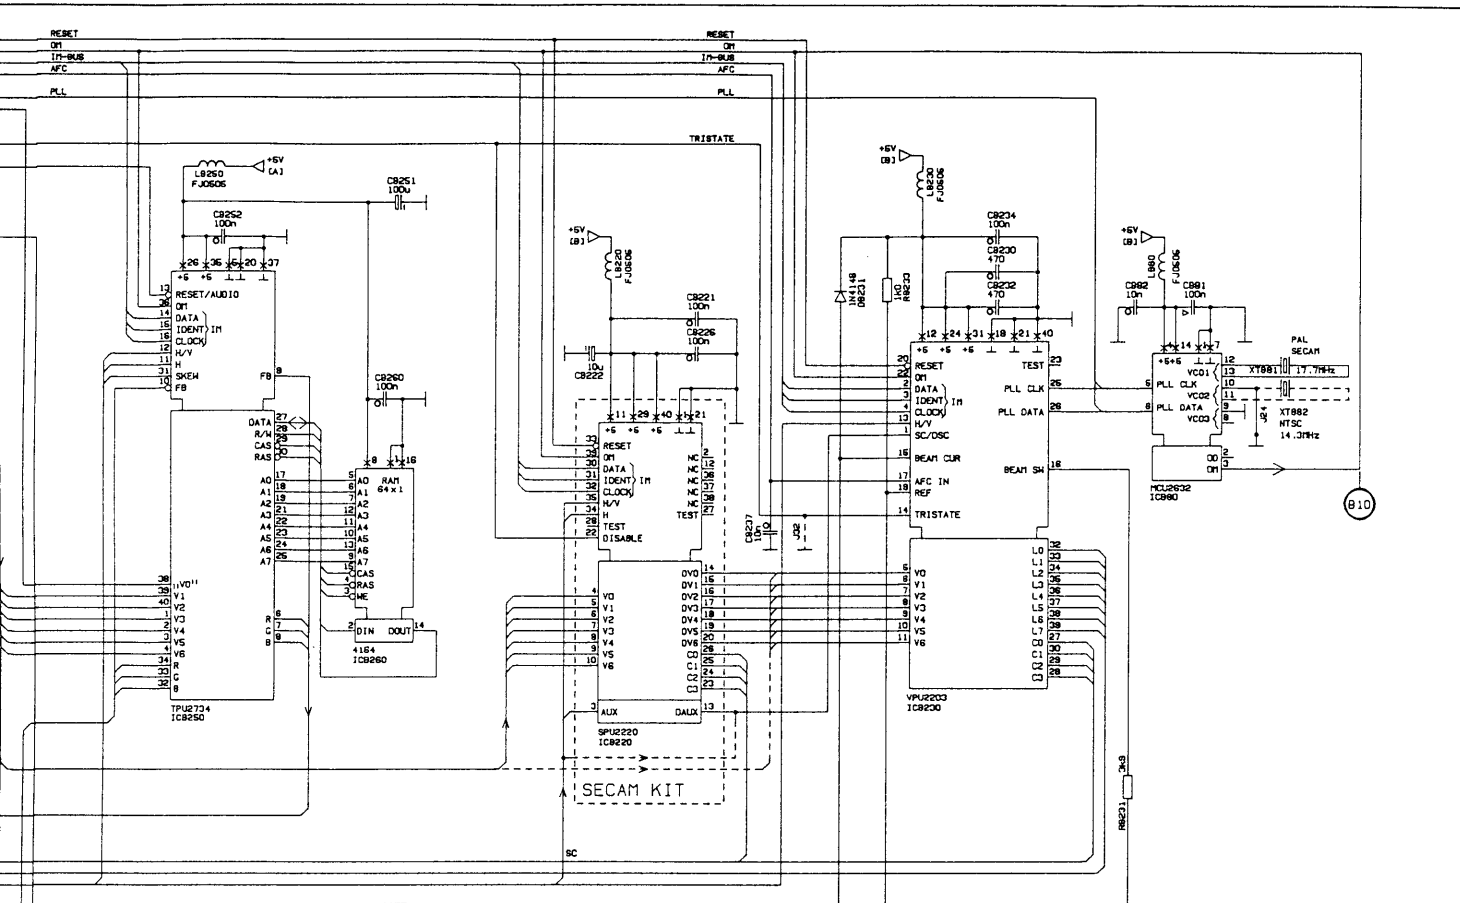

RGB-OUTPUT AND TUBE BASE PANEL
ZOCOLO CINESCOPIO

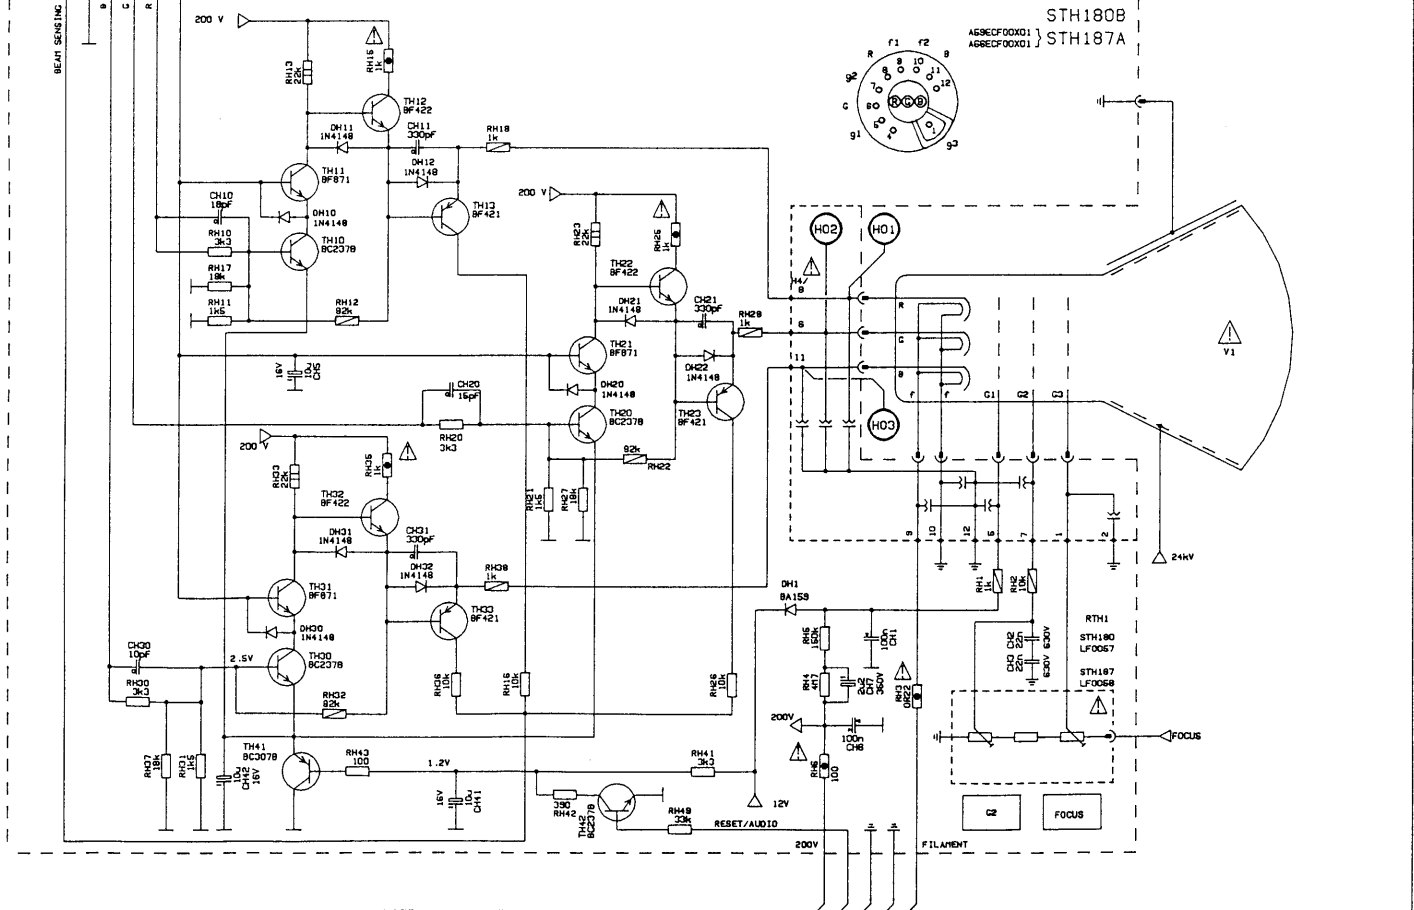

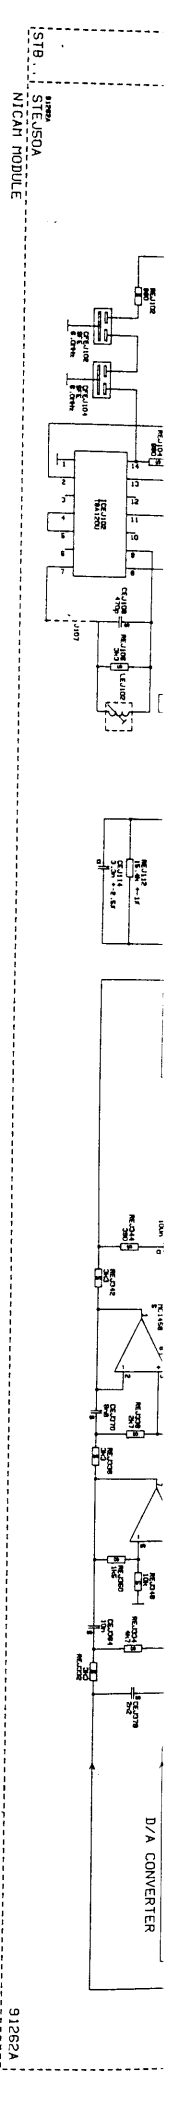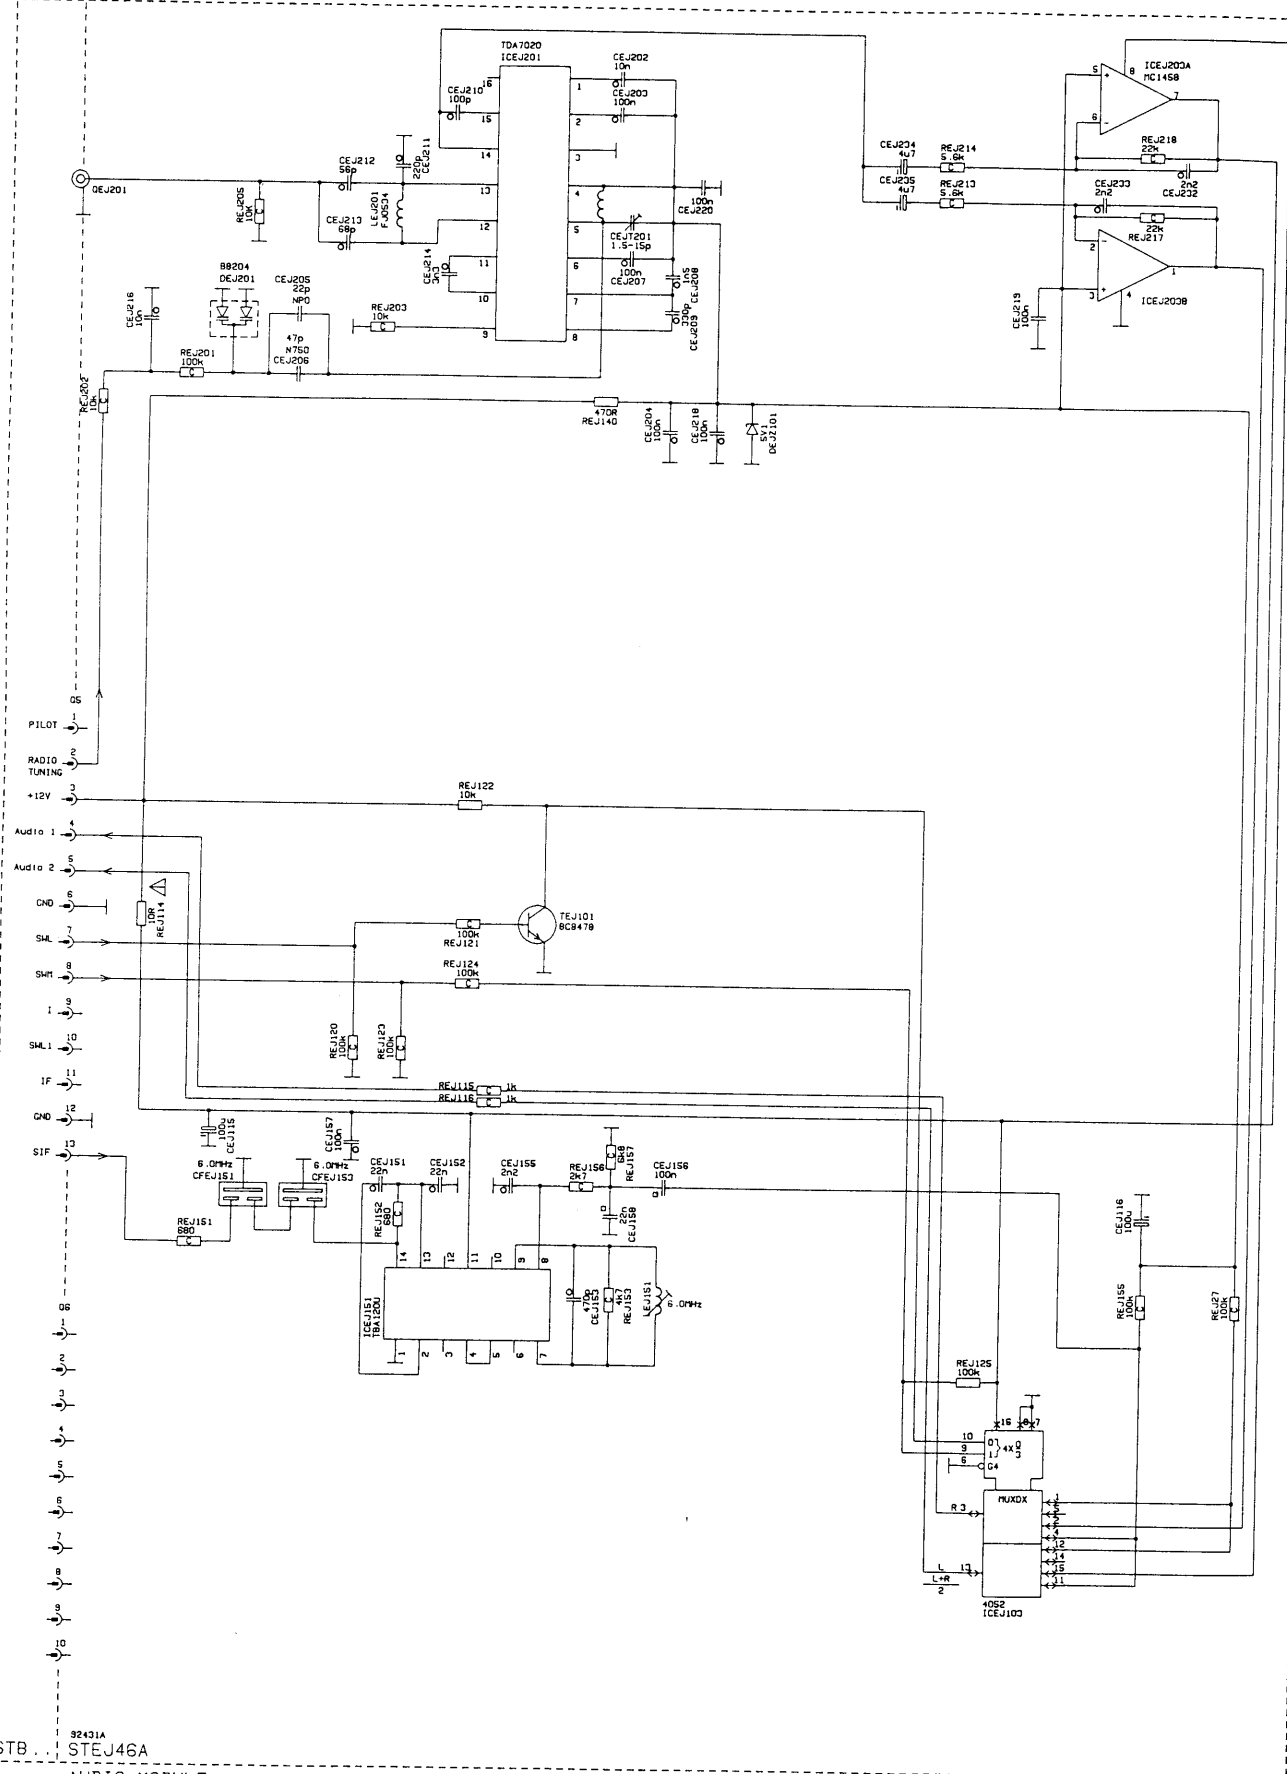


STB... 32401A
 STEJ46A
 AUDIO MODULE
 MODULE AUDIO

21M87
 25M87
 28M87

www.rtv-horvat.dj.hr





288760 04.87
 90313


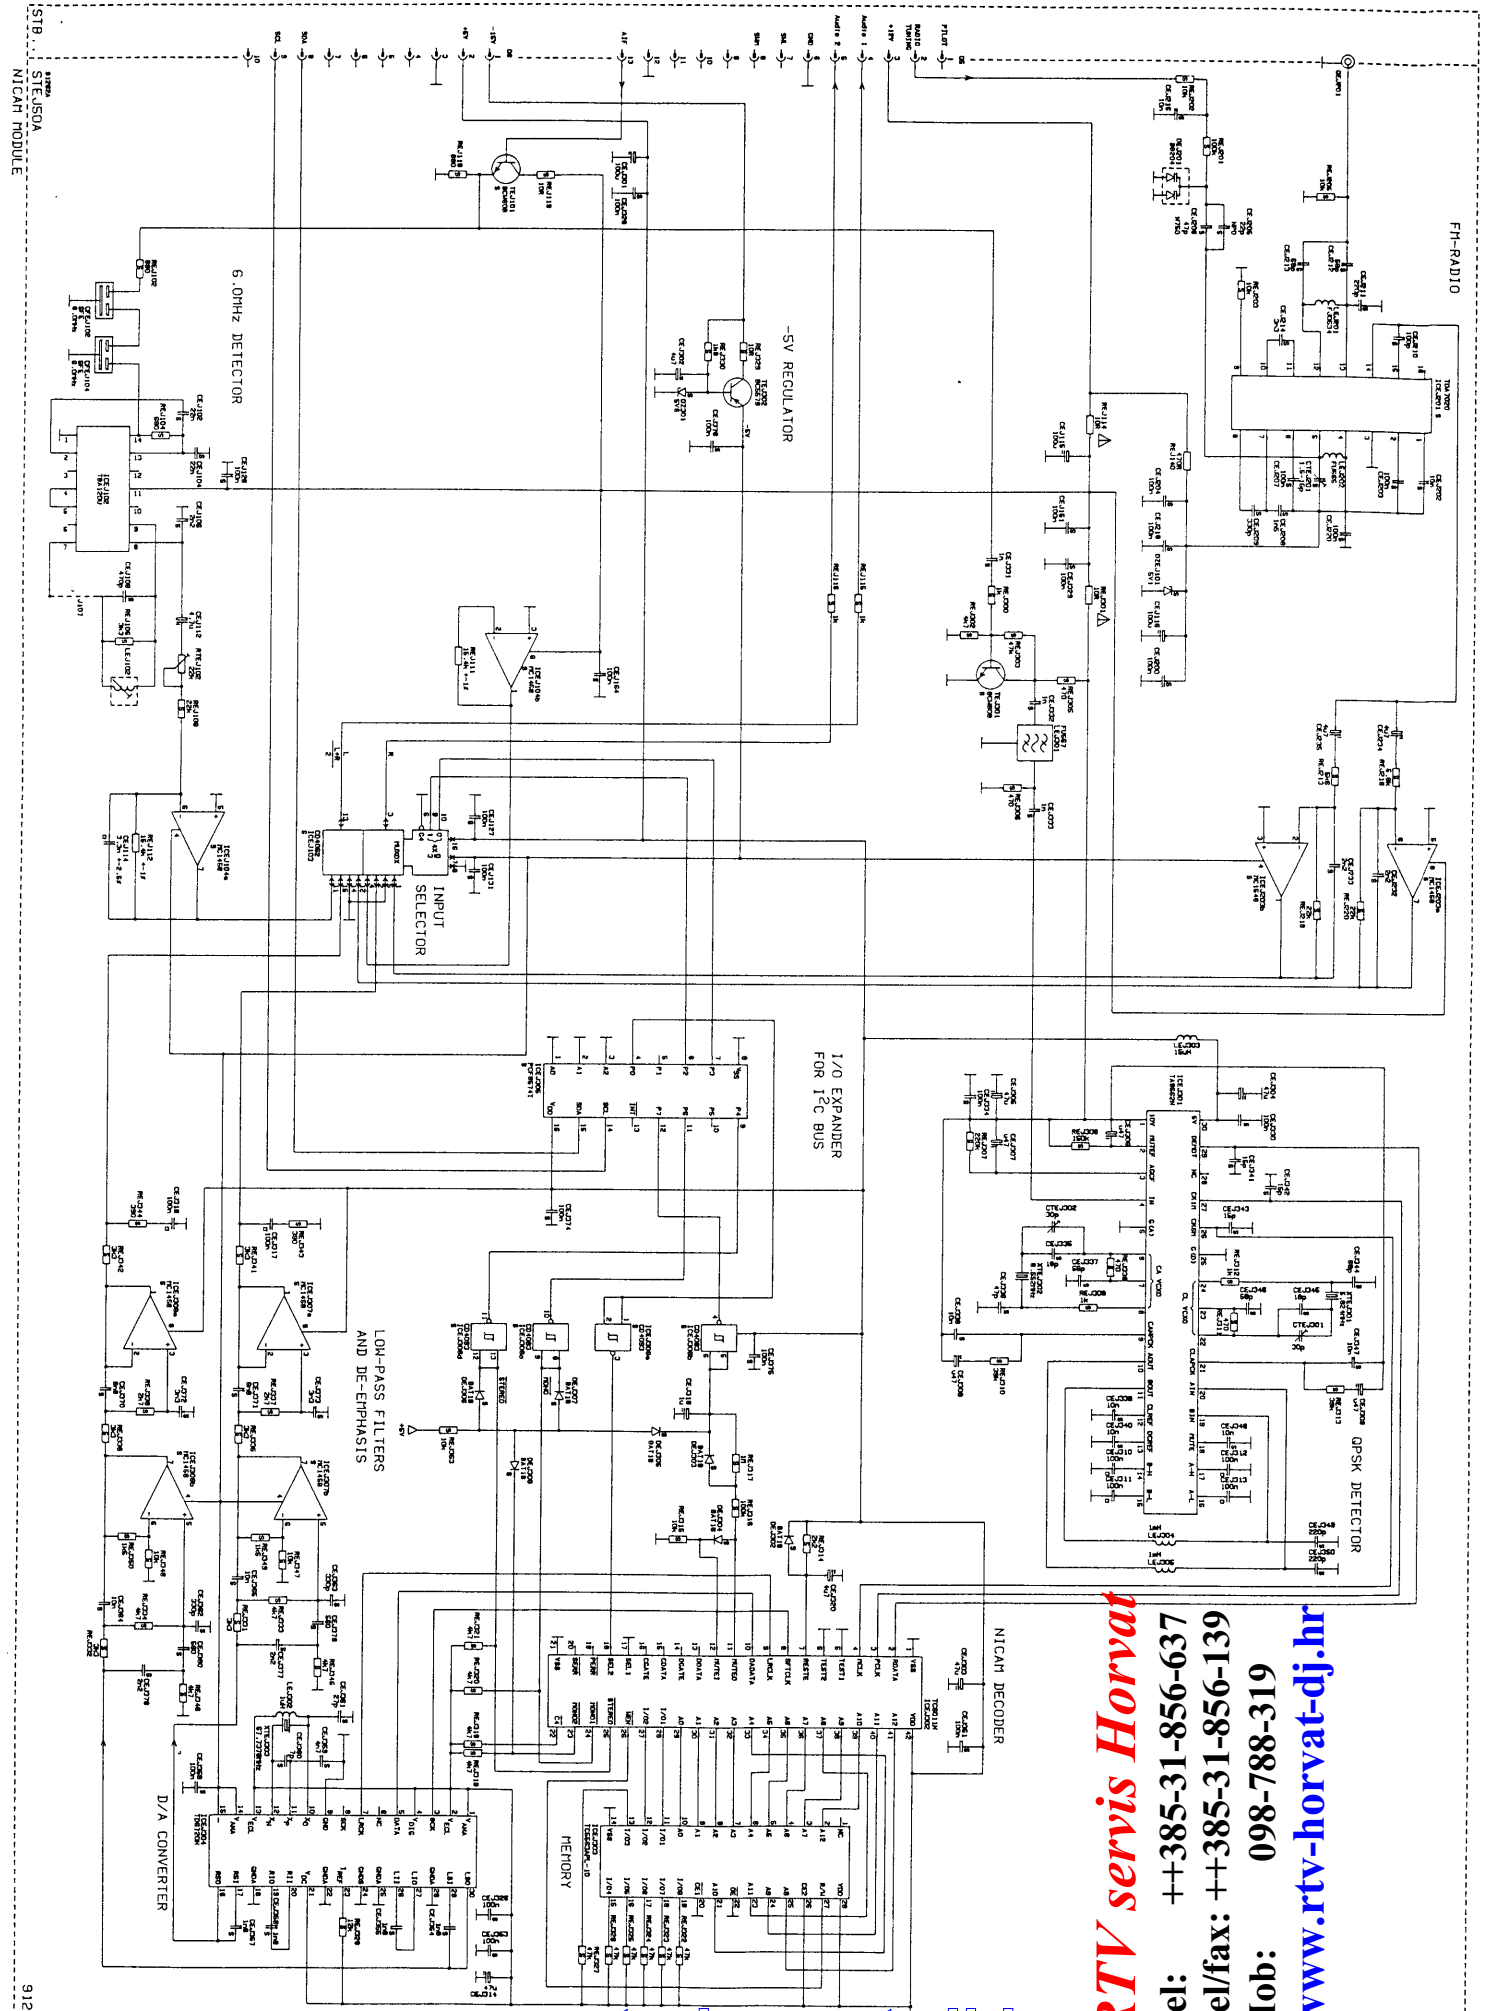





FM-RADIO

RTV servis Horvat
 Tel: ++385-31-856-637
 Tel/fax: ++385-31-856-139
 Mob: 098-788-319
www.rtv-horvat-dj.hr

www.rtv-horvat-dj.hr

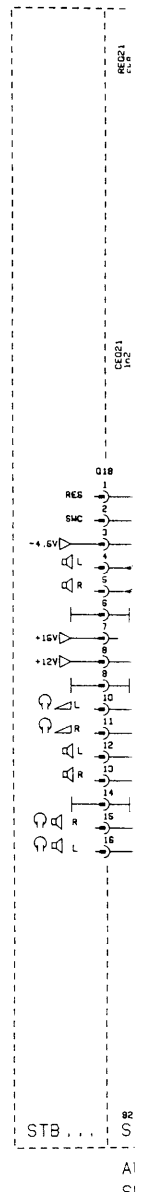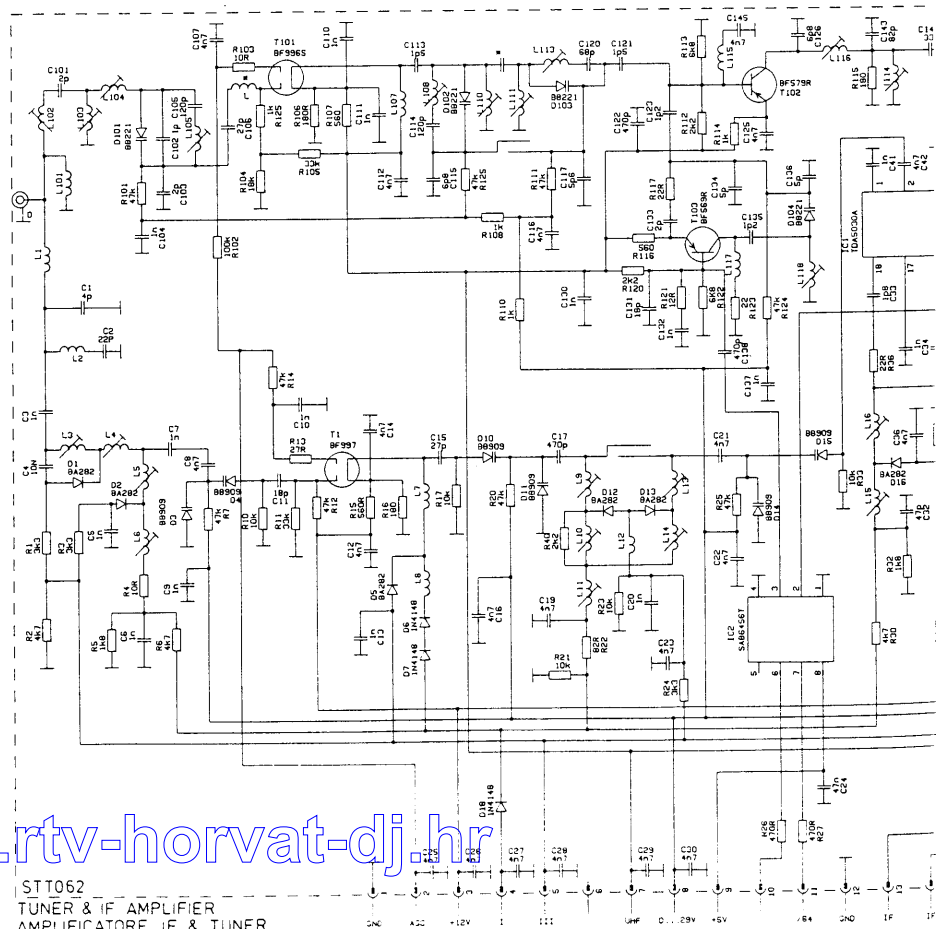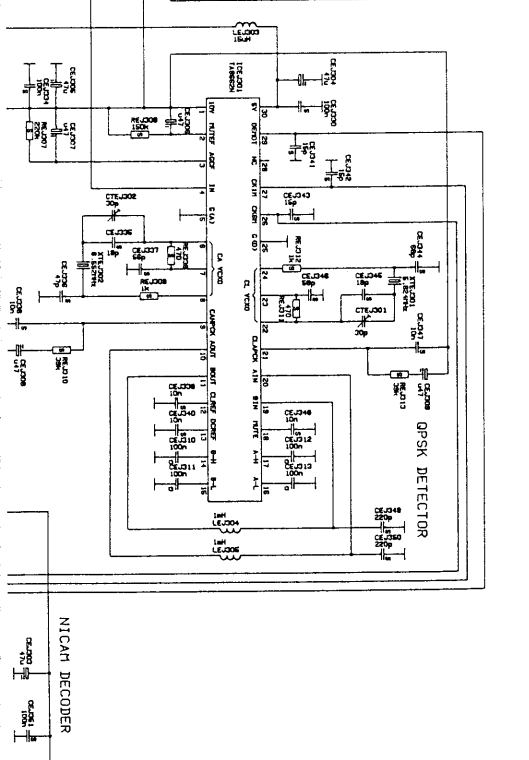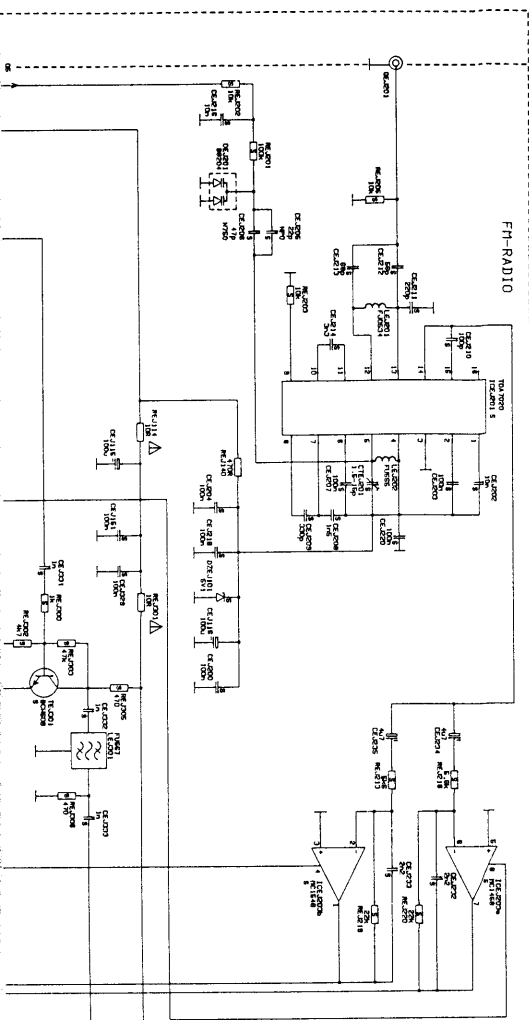

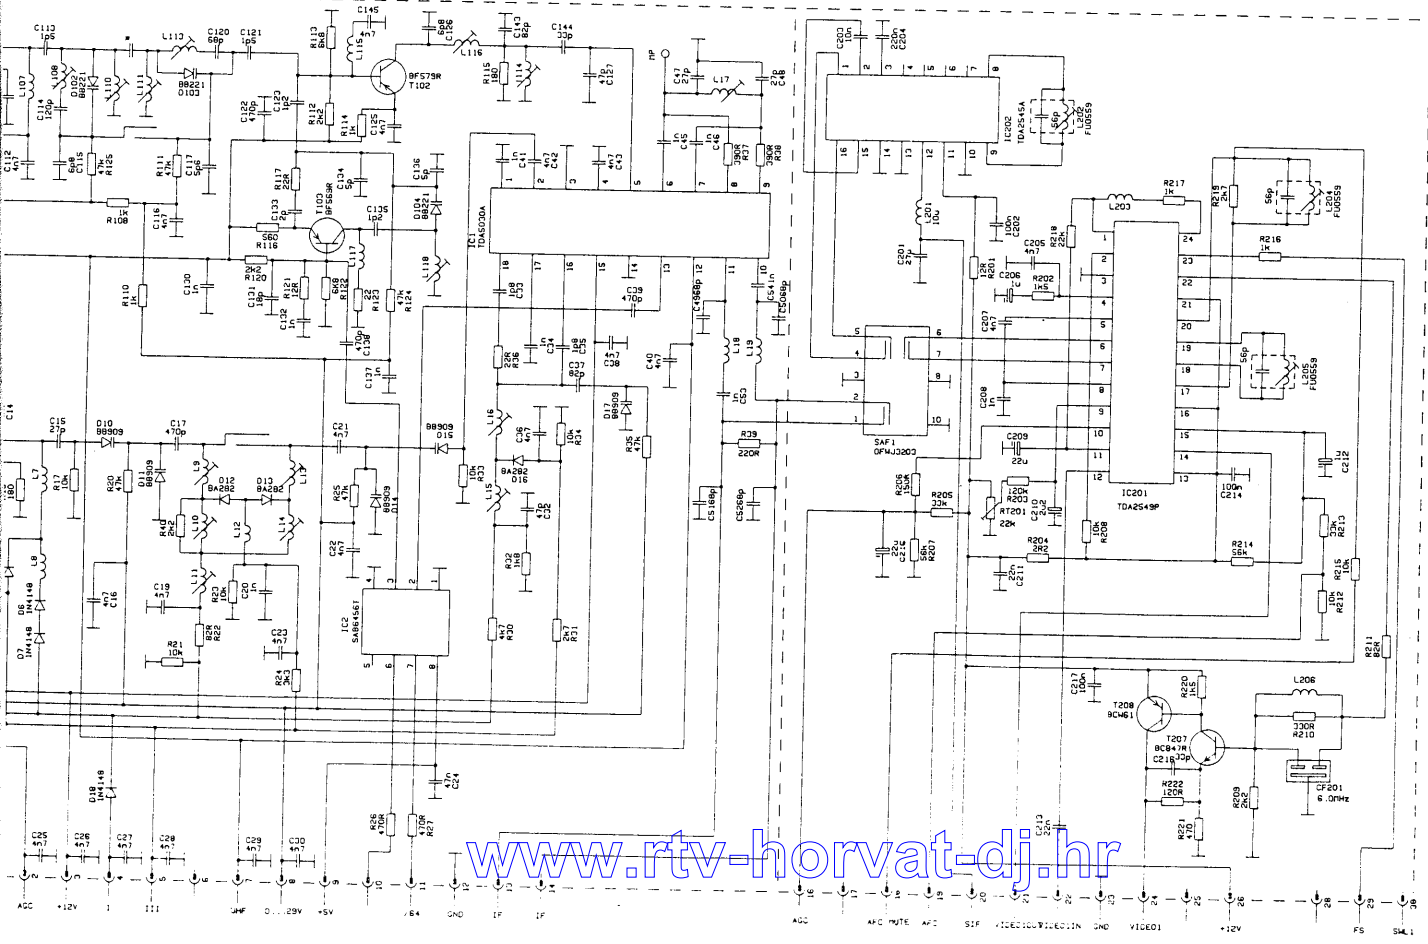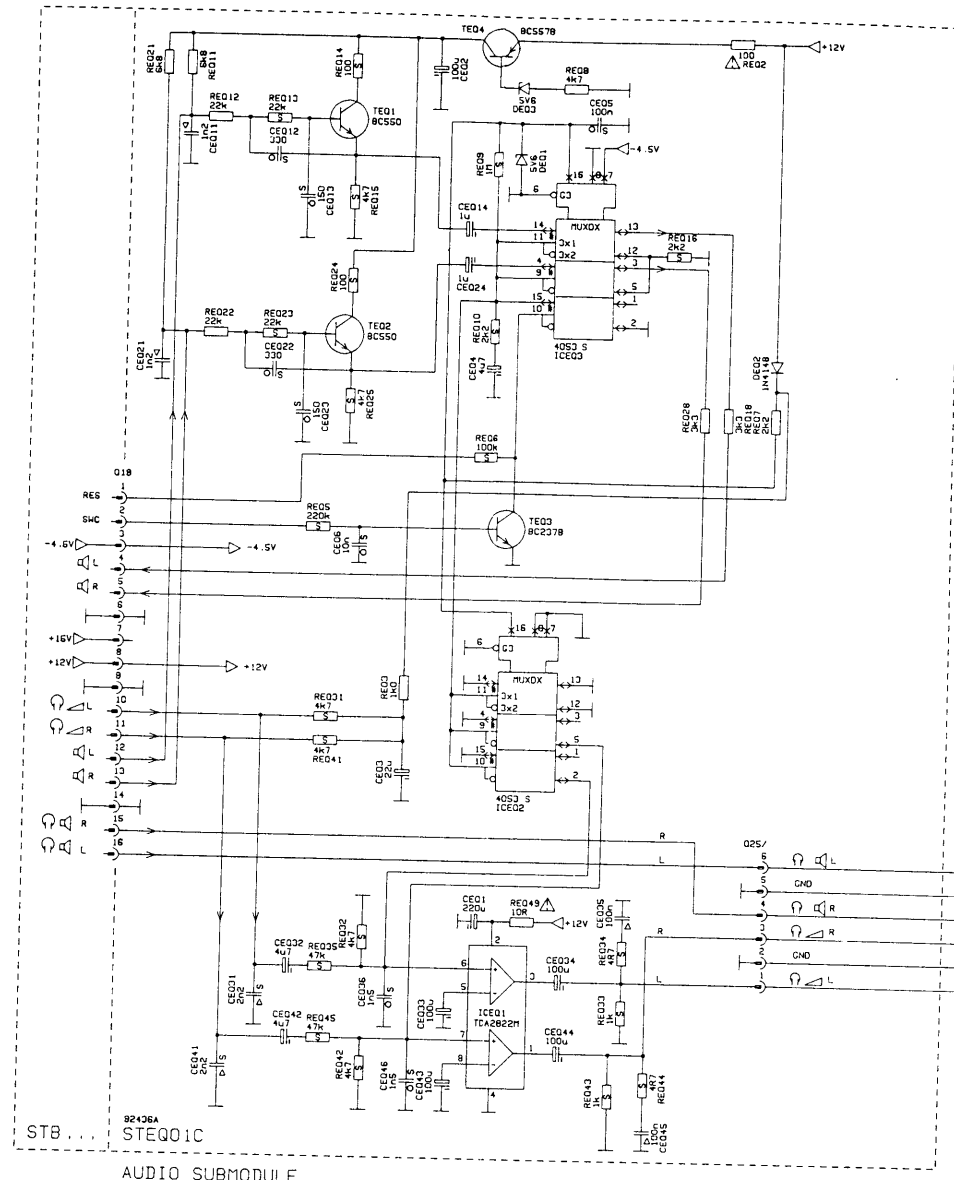

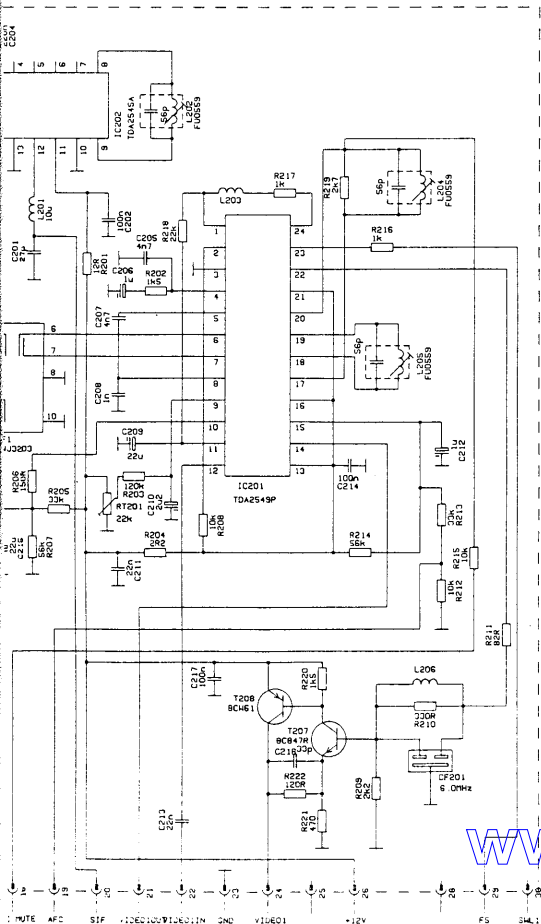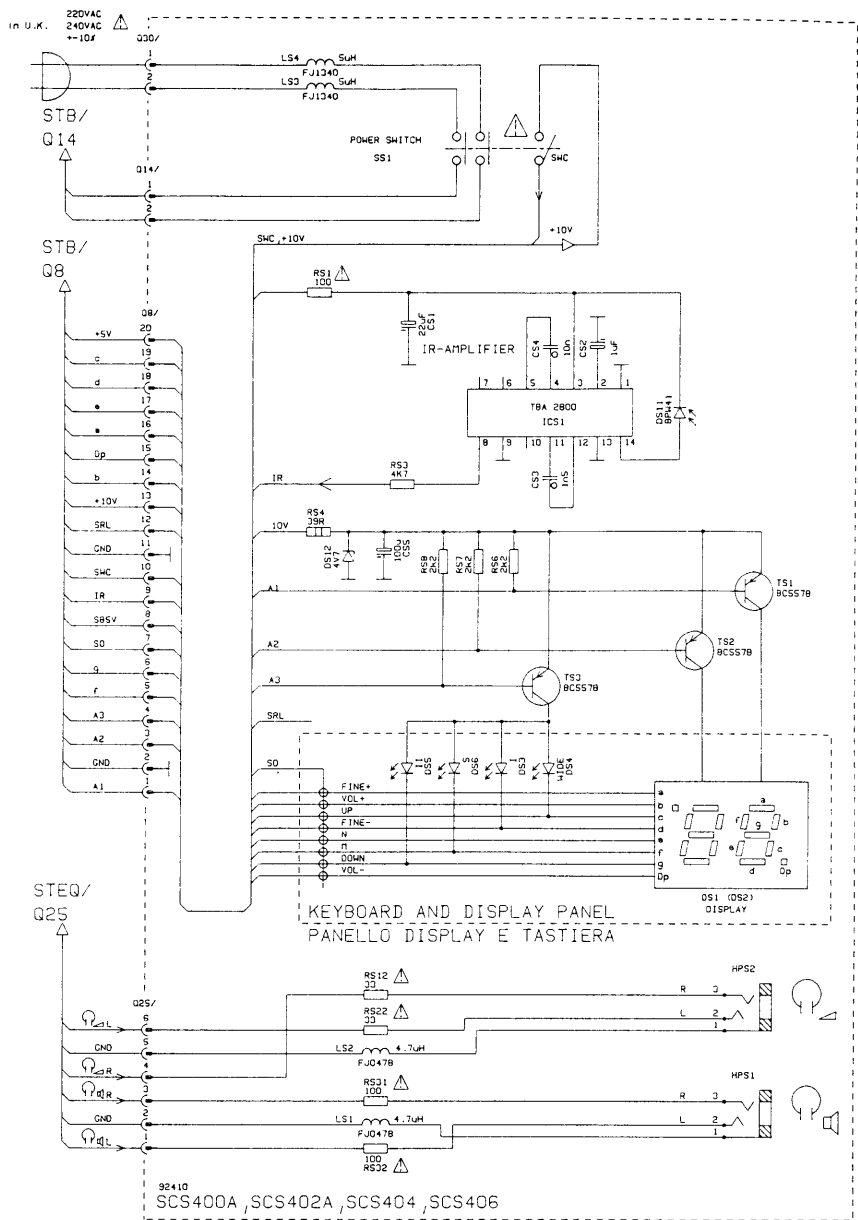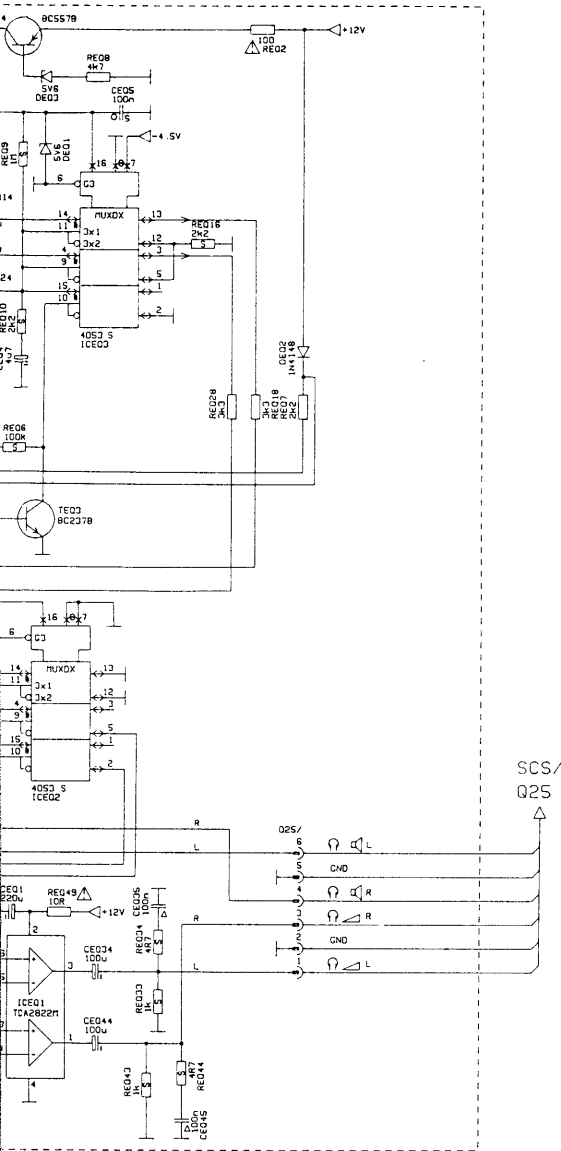

RTV servis Horvat

Tel: ++385-31-856-637

Tel/fax: ++385-31-856-139

Mob: 098-788-319

www.rtv-horvat-dj.hr

92410
STUL60, STUL61
REMOTE CONTROL TRANSMITTER
TRANSMETTITORE TELECOMANDO

www.rtv-horvat-dj.hr